



INSTRUCTIONS


LOADING LABELS

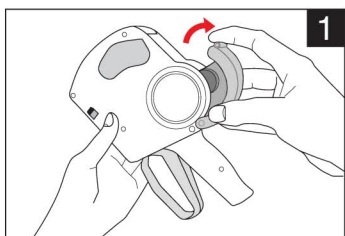


1 Open the label spool compartment located on top of the labeller using your index finger to pull on the black plastic bar.

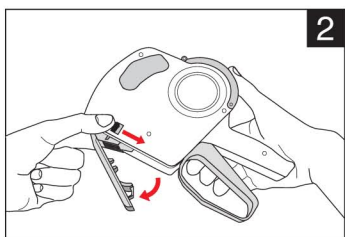

2 Release the base plate located on the bottom of the labeller by pushing the two black release switches located on each side of the unit. Push both switches together using your thumb and index finger. This will release the main base plate and inner label clamp which will now both swing out freely.

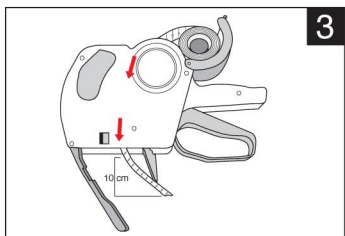


3 Place the label roll onto the spool and feed the labels down the passage inside the labeller until they appear at the base of the unit. Pull 10-15cm worth of labels through the labeller.

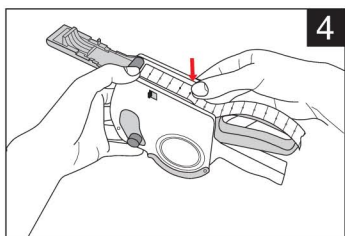


4 Replace the inner label clamp by clicking it into place. This will force the label strip towards the front end of the labeller. Now locate 2-3 of the label holes onto the drive sprocket pins located towards the rear end of the labeller. Finally close the base plate by clicking it into place.

CHARACTER ADJUSTMENT

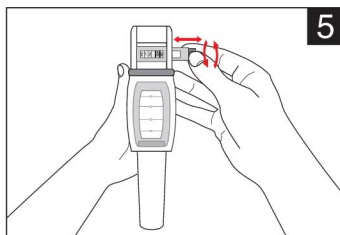


5 To change the characters printed onto the label simply grip the dial located on the right hand side of the labeller and push or pull left or right to select the band of characters you wish to change, once selected rotate the dial to cycle through the characters on the band. Push the dial back to the left once finished.

REPLACING INK ROLLER

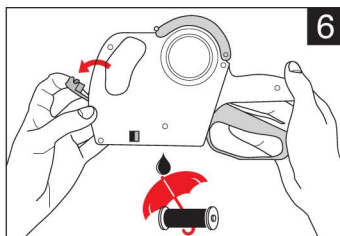


6 Open the ink roller door located on the front of the labeller as identified by an umbrella symbol.

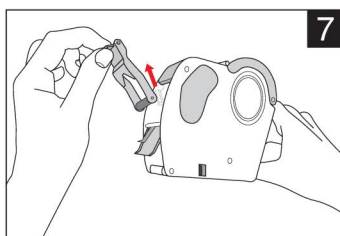

7 Using the exposed tab, pull the ink roller carrier clear of the labeller. The old ink roller can now be removed and replaced by carefully stretching apart the carrier arms (fig. 8). Once the ink roller has been replaced, use the same tab to grip the carrier and slide it back into position inside the labeller.

PRINT HEAD ADJUSTMENT

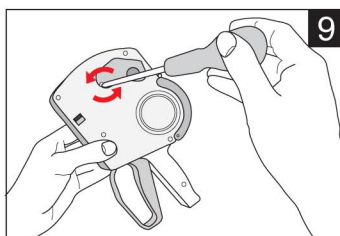


To adjust the vertical position of the print on the label simply loosen the screws located on each side of the print head (2 screws in total). Then, using your thumb and index finger, push or pull the print head back or forth to adjust the print position (fig. 10). Remember to tighten the screws after adjustment.

GATOR® MXSERIES

For additional video instructions and to buy consumables for all Gator Price Labellers visit www.gatorlabellers.com

Compatible with 21x12mm labels

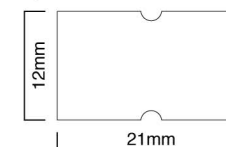

Compatible with 20mm ink rollers

